

ErgoLine Solo X Compact Keyboard

The following is included with the ErgoLine Solo X Compact Keyboard:

- ErgoLine Solo X Compact Keyboard
- USB receiver
- Magnetic strip
- USB cable
- Storage bag



Connecting the keyboard

The ErgoLine Solo X keyboard is very easy to set up. You plug the USB receiver (which is included in the magnetic stripe) via a free USB port in the laptop / PC and you can get started right away. Do not forget to slide the on / off button on the right side to the “on” side.

The keyboard is supplied charged, if the keyboard becomes empty, you can charge it by means of the USB cable. You can easily plug this on the right side of the keyboard (micro USB) and a free USB port of the laptop / computer. The keyboard only charges via the laptop when it is also connected to the power supply.

The supplied magnetic strip gives the option to raise the back of the keyboard to an angle of 5 degrees if necessary. You can place this strip with the flat side on the back of the keyboard and the magnets will stick automatically.

Furthermore, the keyboard has LED indicators, which indicate the status of the energy level.

The top LED indicator shows if the caps lock is on or not, once this mark, the caps lock is on.

The middle LED indicator indicates that the keyboard is looking for a connection, as long as it keeps flashing, there isn't one yet link.

The bottom LED indicator indicates the keyboard is charging, as long as it is red, the keyboard is not fully charged. Once it has turned to blue, the keyboard is fully charged.



Additional keyboard functions

The ErgoLine Solo X keyboard also contains keys with an orange icon or text is displayed.

You can use these functions by using the key combination "Fn" (bottom left) and pressing the desired icon at the same time.

ESC: Open default music player

F1: Play / pause

F2: Previous track

F3: Next track

F4: Sound higher

F5: Sound lower

F6: Mute sound

F7: Open standard internet browser

F8: Search in PC

F9: Open favorites

F10: Open standard e-mail

F11: Lock / unlock keyboard

F12: Open "This PC"

Insert: Open calculator

Left arrow: Home button

Up arrow: Page up

Down arrow: Page down

Right arrow: End button

Maintenance of the keyboard

By means of the included storage bag, the keyboard is protected during transport and there is less chance of detaching keys during transport.

Do not forget to switch off the keyboard with the on / off button after use. This prevents the keyboard from running out quickly and extends the life of the rechargeable battery.